




DIZAINA
FABRIKA

Installation instructions
Floating installation with CLICKitEASY

Engineered Hardwood Flooring

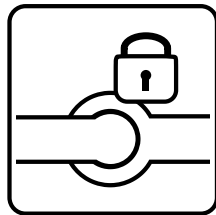


CLICK IT EASY


These documents serve as basic information and do not replace the detailed, individual advice of your dealer. Please store these instructions in a safe place.

Preparation and suitability test

1

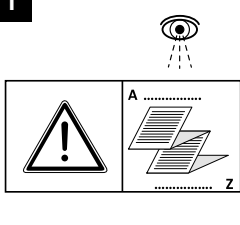


2

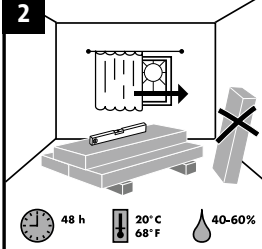


48 h 20°C / 68°F 40-60%

3

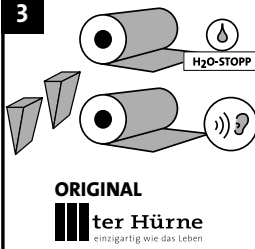


ORIGINAL
ter Hürne
einzigartig wie das Leben

4

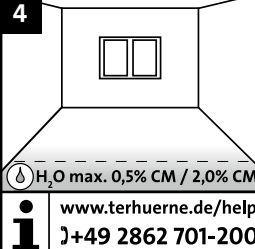


H₂O max. 0,5% CM / 2,0% CM
www.terhuerne.de/help
+49 2862 701-200

5

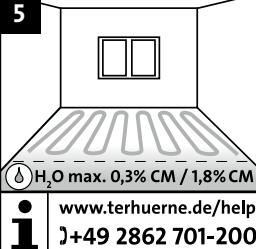


H₂O max. 0,3% CM / 1,8% CM
www.terhuerne.de/help
+49 2862 701-200

6

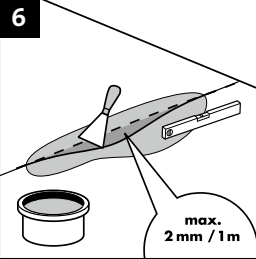


max. 2 mm / 1 m


7

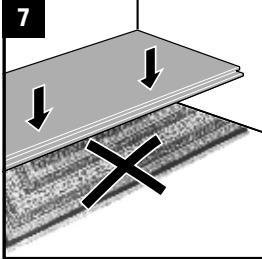


8

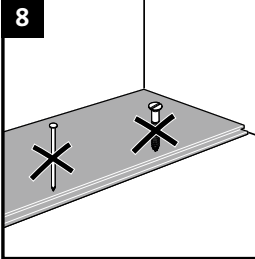

9

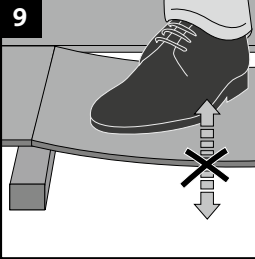

10

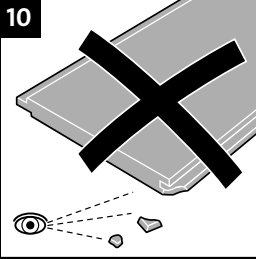

11



12




Glue-down installation instructions

www.terhuerne.de/help
+49 2862 701-200


Installation with CLICKitEASY

13

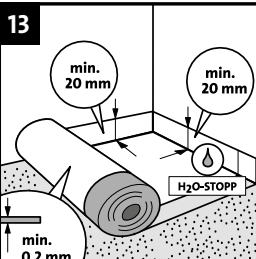


min. 20 mm min. 20 mm min. 0,2 mm

14

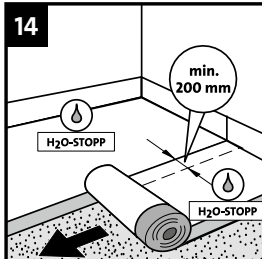


H₂O-STOPP min. 200 mm

15

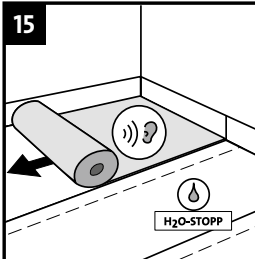


H₂O-STOPP

16

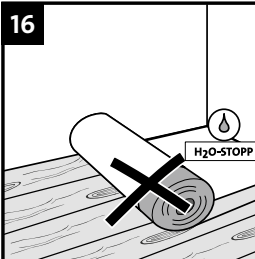


H₂O-STOPP

17

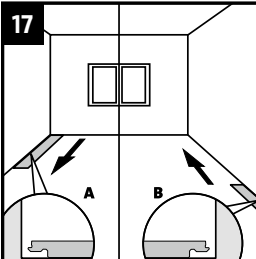


A B

18

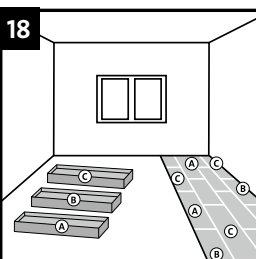


19

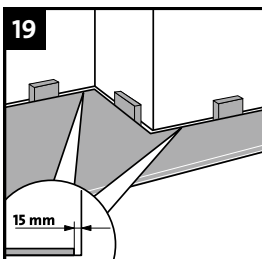


15 mm

20

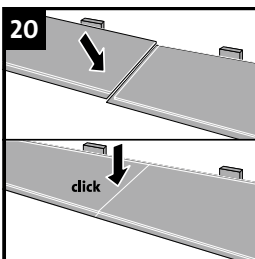


click

21







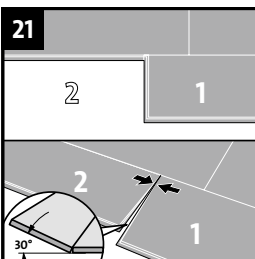


30°



22

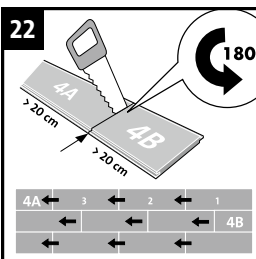












180° > 20 cm > 20 cm

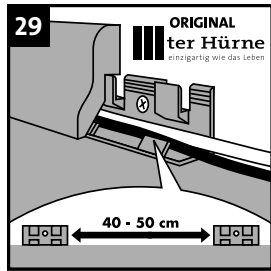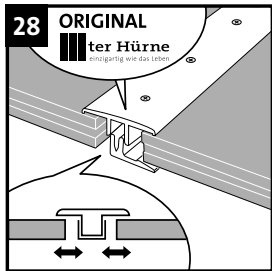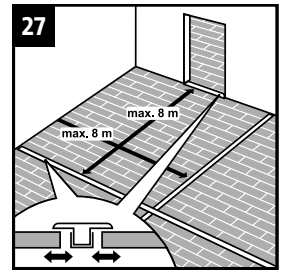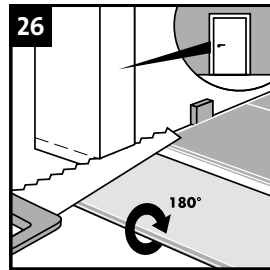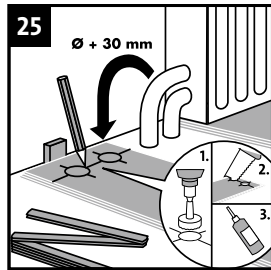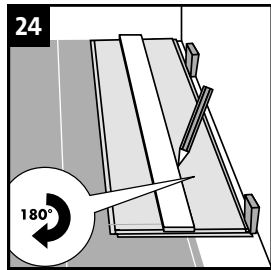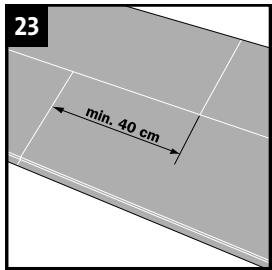

Disassembly with
CLICKitEASY

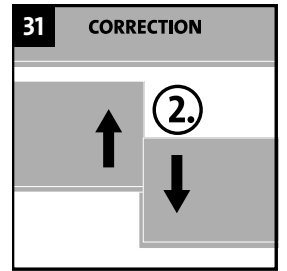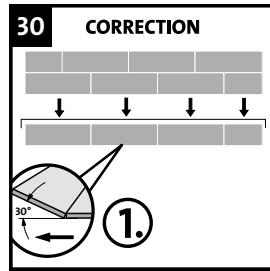

Care and use

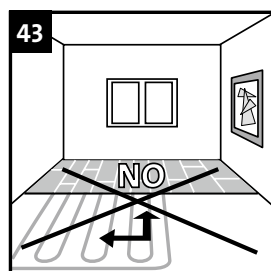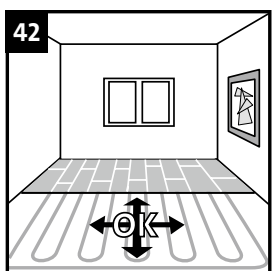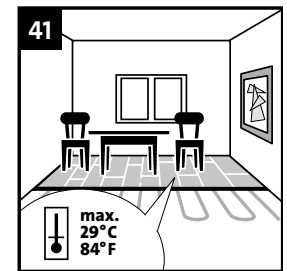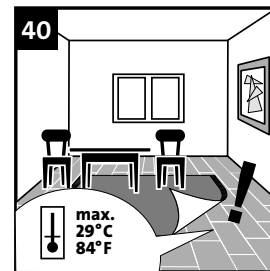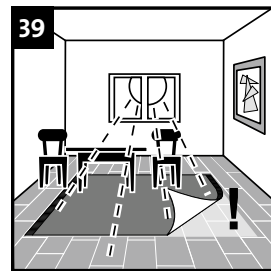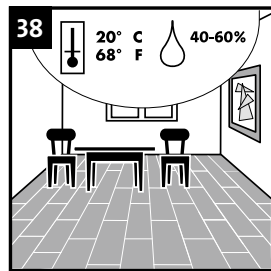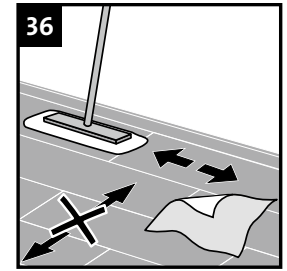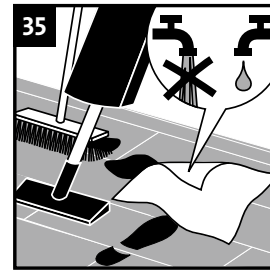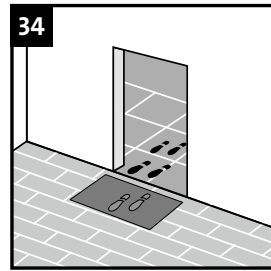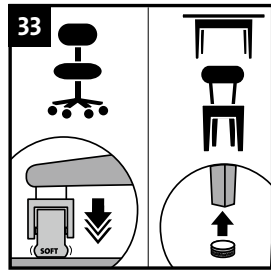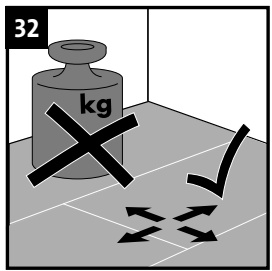

Installation instructions

Floating installation with CLICKitEASY

▪ Engineered Hardwood Flooring

Preparation and suitability test

- 1) Thoroughly read these installation instructions before installation.
- 2) To acclimatise the materials, store the package horizontally and unopened at 20°C and 40-60% air humidity in the middle of the room in question for 48 hours and not in front of the window.
- 3) Use original ter Hürne accessories for installation.
- 4) For subfloors without underfloor heating:
Before installation, a professional installer must perform and log a moisture test (CM measurement). Residual moisture on a calcium sulphate floor screed may not exceed 0.5% CM, and 2.0% CM for cement screed.
- 5) For subfloors with underfloor heating:
Before installation, a professional installer must perform and log a moisture test (CM measurement). Residual moisture on a calcium sulphate floor screed may not exceed 0.3% CM, and 1.8% CM for cement screed.
- 6) Unevenness in the subfloor that is greater than 2 mm per meter must be levelled using a levelling compound.
- 7) Installation on textile subfloors and on loosely installed old surfaces (e.g. carpets) is prohibited.
- 8) The floorboards may neither be screwed nor nailed (fixed).
- 9) The substructure must be able to take a load; there must be no bounce, particularly in a joist structure with subfloor panels.
- 10) Before and during installation, the floor elements must be thoroughly inspected for material defects. Floorboards with visible defects or damage must not be installed. No claims can be accepted once goods have been installed.
- 11) This floor is not suitable for installation in damp rooms (bathroom, sauna, WC, etc.).
- 12) Required tool.

Glue-down installation instructions

Glue-down installation instructions - are available online and may be requested from ter Hürne.

Installation with CLICKitEASY

- 13) For mineral subfloors, a vapour barrier (PE-film > ter Hürne accessories) must be used. It must be at least 0.2mm thick. During installation, it must be raised at least 20 mm up the adjacent walls.
- 14) The vapour barrier must overlap with and adhere to the adjacent sheet by at least 200 mm when installed (or as specified by the product).
- 15) Place a footfall and impact sound insulation (ter Hürne accessories).
- 16) No vapour barrier (PE-film) may be used on wooden subfloors.
- 17) Begin installing the floorboards from right to left. The groove side should face the wall.
- 18) For a homogeneous surface image, please use goods from different boxes.
- 19) First row of planks:
Keep a distance of 15 mm from all walls and fixed components. To do so, use spacer wedges (ter Hürne accessories). They must be removed again after installation.
- 20) Align the top edge of the planks to the laid plank and push down on them so that they audibly click into place.
- 21) From the second row of planks: First, place the long side of the plank to be installed at an 30° angle towards the tongue side of the installed plank. Screw it into the profile and push the plank angled towards the header. Then lightly press down on the floorboard so that it audibly locks into place.
- 22) At the end of one row: Turn the plank to be cut by 180° and draw the cutting marks. The cut parts of a plank must be at least 20 cm long for installation.
- 23) Adjacent joints of headers must be at least 40cms apart from each other.

24) Last row of planks: Turn the plank to be cut by 180° and draw the cutting marks.

25) Radiators: Add 30 mm to the pipe's diameter and draw the cutting marks. Drill it and separate the planks in the middle of the drill holes. Adhere the installed planks with some glue on the cut section.

26) Doors: Turn a plank over to mark the cutting line. Adapt the door frames accordingly.

27) An expansion gap must be installed if the extension is greater than 8 meters and in door areas and crossover points between rooms.

28) Cover the expansion gap with the appropriate profile (ter Hürne accessories).

29) Install the skirting clips spaced approx. 40-50 cm apart (ter Hürne accessories).

When installing skirtings, transition and finishing profiles or door frames, ensure that the skirtings, profiles, door frames or similar elements are never fixed or wedged to the floor.

Disassembly with CLICKitEASY

30) Angle the entire row of planks by 30°. Then loosen the row of planks from the installed area.

31) Separate the planks from each other by pushing the head ends evenly in opposite directions.

Care and use

32) Do not fix the floor using heavy objects such as waterbeds, kitchen units, chimneys, aquariums, etc.

33) Install felt gliders on all movable furniture immediately after installation. Only use soft chair castors (type W).

34) Place protective mats in the entrance areas.

35) Only clean and maintain with a broom, vacuum cleaner or damp, wrung-out cloths/mops. Please do not use a steam cleaner (212°F, 100°C). Do not allow standing water to form on the floor surface.

36) Wipe only in the floorboards' longitudinal direction.

37) Only use cleaning and maintenance products from the ter Hürne product line. Follow the instructions on the product label.

38) Ensure a consistent room temperature of 20°C and 40-60% air humidity.

39) Areas that are continuously covered by carpet, furniture or other objects may show differences in colour after a certain period of time due to the light's effect.

40) Make sure that no heat accumulates below covered surfaces (e.g. rugs) when using underfloor heating. The area below the carpet may not exceed 29°C.

41) The surface temperature may not exceed 29°C.

42 & 43) Installation on a subfloor that is only heated in certain areas is prohibited.

44) Important and only for products with natural oil.

45) Cleaning with ter Hürne conditioning concentrate.

Our written and verbal technical instructions, in general, in the installation instructions, in technical information, and all brochures are based on our own experience and are given to the best of our knowledge, but they constitute non-binding information. Due to the many application possibilities, not all individual details can be shown. As such, no obligation and liability can be assumed by ter Hürne. These instructions can be adapted to technological advances at any time without notice.