






## INSTALLATION

### Horizontal installation:


Spacing between posts max. 1 m.  
Nylon screws with  
galvanized steel thread M6

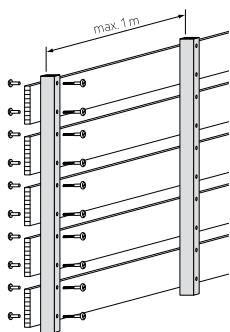

### Vertical installation:

Mount the balcony profiles to  
supports at the selected height  
with using nylon screws.

Put caps and fasten them  
with appropriate adhesive.

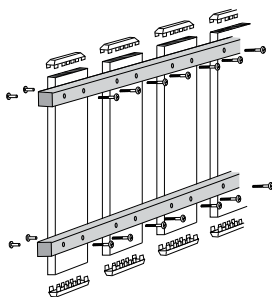

Nylon screws  
with galvanized steel thread M6  
1 pac. = 100 pcs  
Available in colours: White, Grey, Black and Brown.



**BAUKULIT**